



SPARE PARTS LIST
ELECTRIC WATER HEATER GEYSER

Models


SG 50

SG 80

SG 100

Edition 1 of 1 March 2000



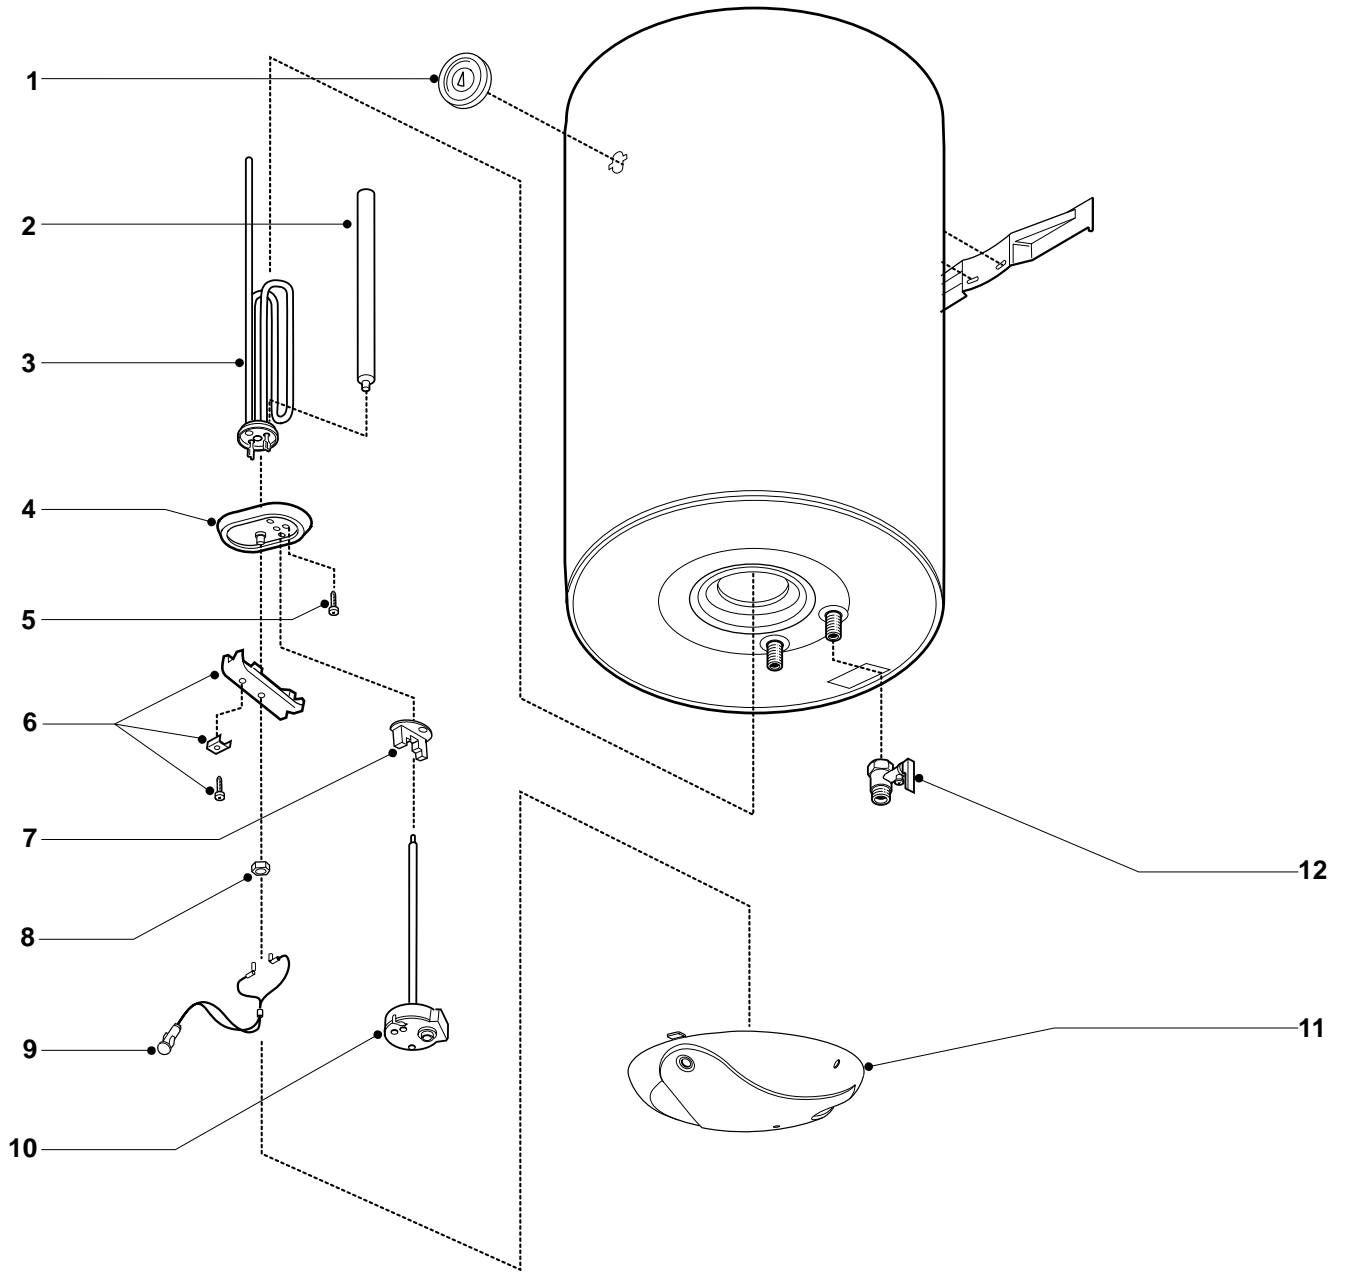

ER2000830011501001

MODELS	CODE	SERIAL NO. VALIDITY	REF.
SG 50	869371	000718	A
SG 80	869372	000718	B
SG 100	869373	000718	C

PART.	CODE	DESCRIPTION	REF.	NOTE
1	571731	Thermometer		
2	993014	Anode (magnesium 25 x 230)		
3	816615	Element RCA 300 PA M5 (1200W - 230V)	AB	
3	816616	Element RCA 300 PA M5 (1500W - 230V)	C	
4	993012	Flange with gasket		
5	993000	Wood Screw (thread M6x14 8mm)		
6	993011	Flange bracket		
7	993009	Terminal shield (blue)	AB	
7	993010	Terminal shield (red)	C	
8	570127	M8x14x8 hexagonal nut		
9	993186	Signal lamp		
10	691214	Thermostat (TBS 2 300)		
11	993180	Plastic cover		
12	571730	Safety valve		

NOTE	DESCRIPTION