



SPARE PARTS LIST  
ELECTRIC WATER HEATER GEYSER  
Models


**SG 10 UR**

**SG 15 UR**

---

Edition 1 of 1 March 2000



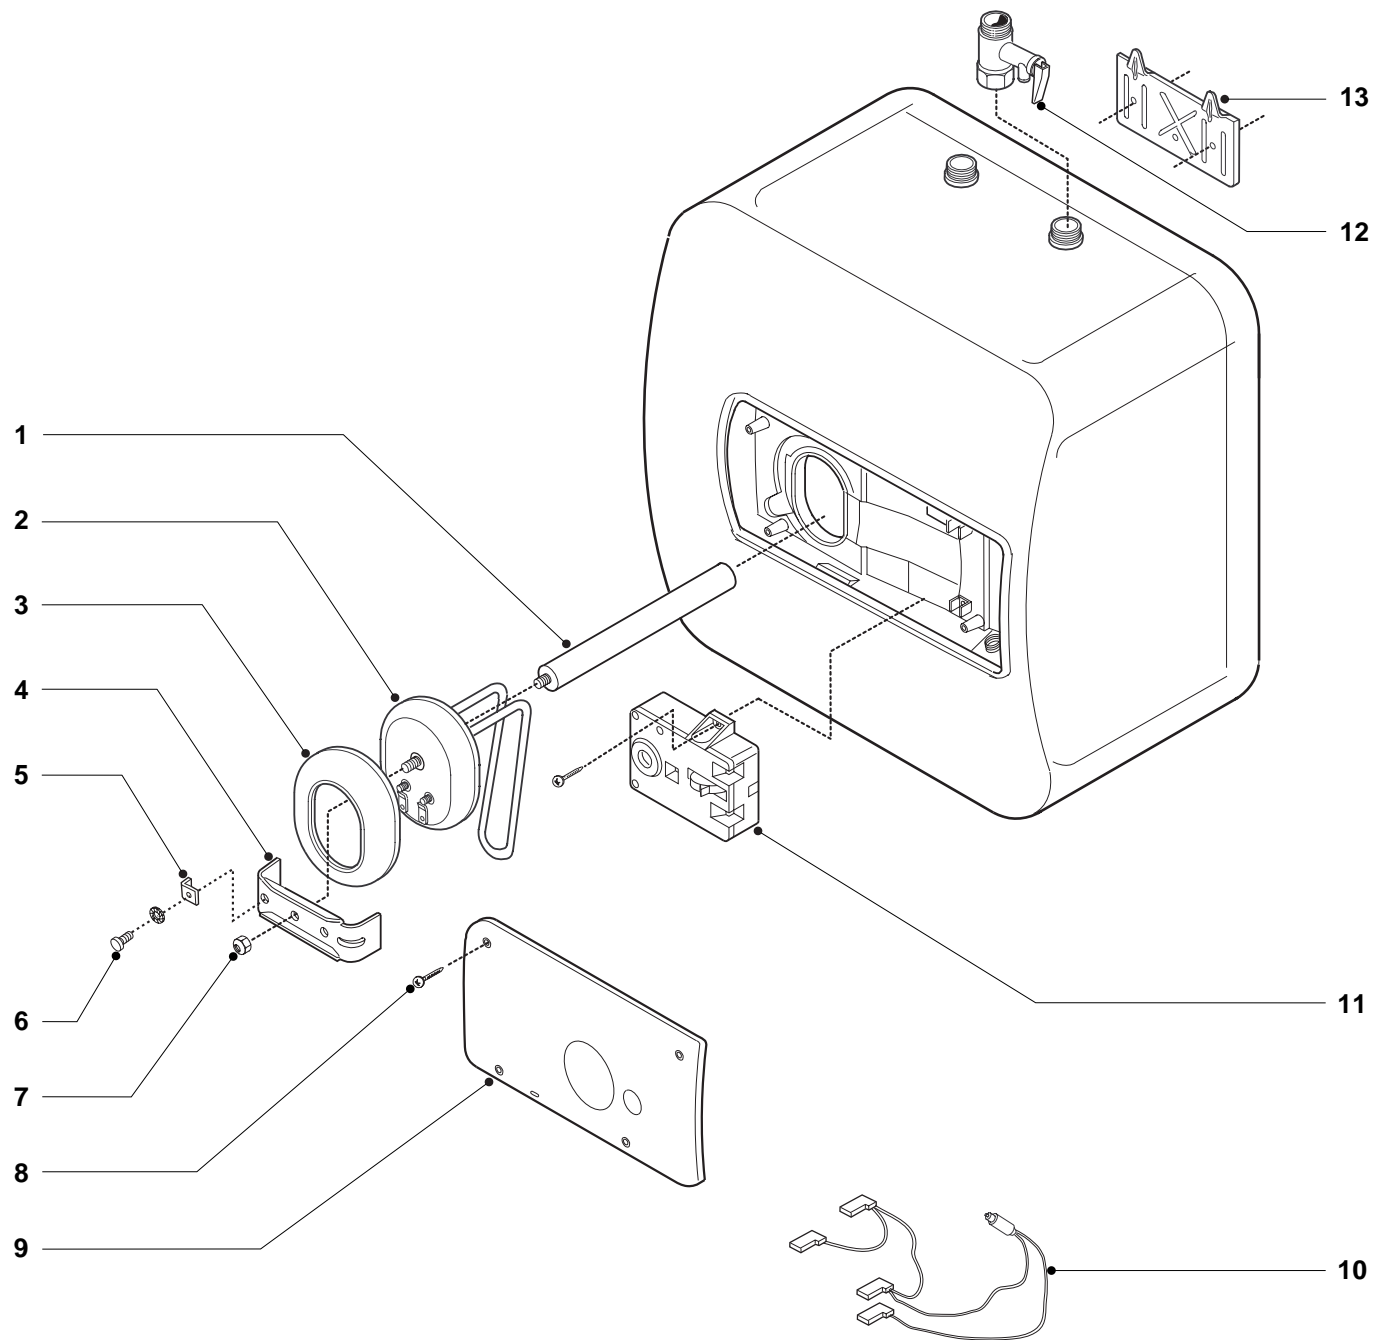

MODELS	CODE	SERIAL NO. VALIDITY	REF.
SG 10 UR	868354	20000327	A
SG 15 UR	868356	20000327	B

Версия 1, 01.03.2000  
**SG 10 UR; SG 15 UR**

№	старый код	текущий код	наименование	прим.
1		574305	анод магниевый 10LT L=155	
2		810786	нагревательный элемент RSCA C SG (1200W 230V)	
3		570016	прокладка фланцевая	
4		570024	скоба для фиксирования фланцевой прокладки	
5		570063	клемма для заземления	
6		570078	винт самонарезающий M4x8	
7		570069	гайка M6	
8		570074	винт 6Px15,87	
9		994084	крышка	
10		570077	электропроводка	
11		691499	термостат TIS 10A	
12		571730	клапан предохранительный 1/2" 8,1 Бар	
13		570341	кронштейн крепления к стене	

модель	код	техн. паспорт	
SG 10 UR EE	868354	20000327	А
SG 15 UR EE	868356	20000327	В

<b>PART.</b>	<b>CODE</b>	<b>DESCRIPTION</b>	<b>REF.</b>	<b>NOTE</b>
1	574305	Anode (magnesium M4 14x155)		
2	810786	Element RSCA SG (1200W-230V)		
3	570016	Flange gasket		
4	570024	Flange bracket		
5	570063	Terminal (earth)		
6	570078	Screw (tapping M4x8)		
7	570069	Retaining nut (Heating element)		
8	570074	Plastic cover retaining screw		
9	994084	Plastic cover		
10	570077	Neon lamp and wiring		
11	691499	Thermostat		
12	571730	Safety valve		
13	570341	Heater wall hanging bracket		

<b>NOTE</b>	<b>DESCRIPTION</b>